

ITEM NO.:

4-MS-XX


Compatible for below items

4-FLOOD-A1-3000K-XX

4-FLOOD-A2-3000K-XX

INSTALLATION STEPS:

1. Secure the motion sensor to the mounting plate.
2. Connect the wires: connect the red wire from motion sensor to the fixture black wires with wire nut, connect the white wire from motion sensor to the fixture white wires and the 6" white pigtail wire (included in the motion sensor box) together with wire nut.

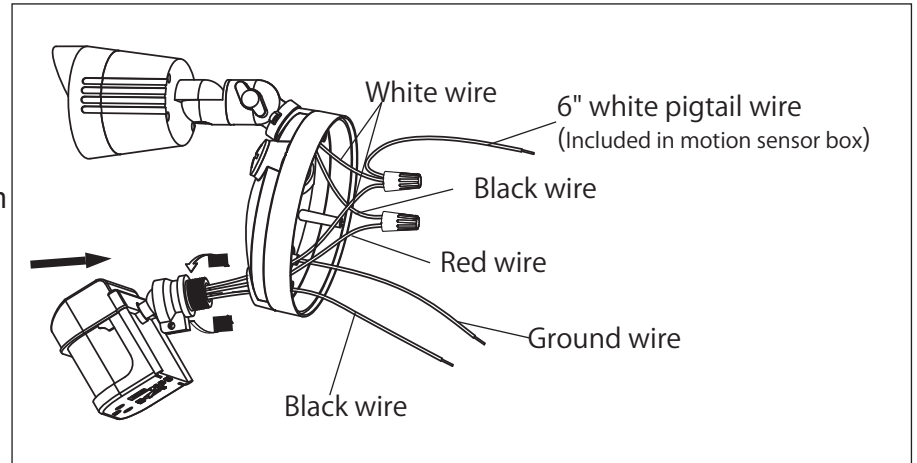

MOTION SENSOR SETTINGS

Please read this carefully and save it, as it may be needed at a later date.

After installing your motion activated light, you are ready to set-up the motion sensor. Make sure the wall switch is on.

Sensor has two selectable modes:

Mode is selected by positioning switch beneath desired mode

1. On-time – Switch the TIMES/TEST switch in the TEST position to disable the photocell and allow light to come on during daylight hours.
2. RANGE - Rotate the RANGE knob fully clockwise to maximum RANGE(20-70ft).

MANUAL OVERRIDE : To disable the motion sensor and keep the light continuously on for the night, flip the wall switch off for 3 seconds and then back on. To reset to Security mode, flip the switch off again for 3 seconds and then back on.

If you leave the light on all night it will automatically turn off at dawn and reset to Security mode.

NOTE: If you get confused while switching modes, turn the power at the breaker or wall switch off for one minute, then back on. After the calibration time, the control will be in the Security mode.

