


ASSEMBLY INSTRUCTIONS

ITEM NO.: M50039

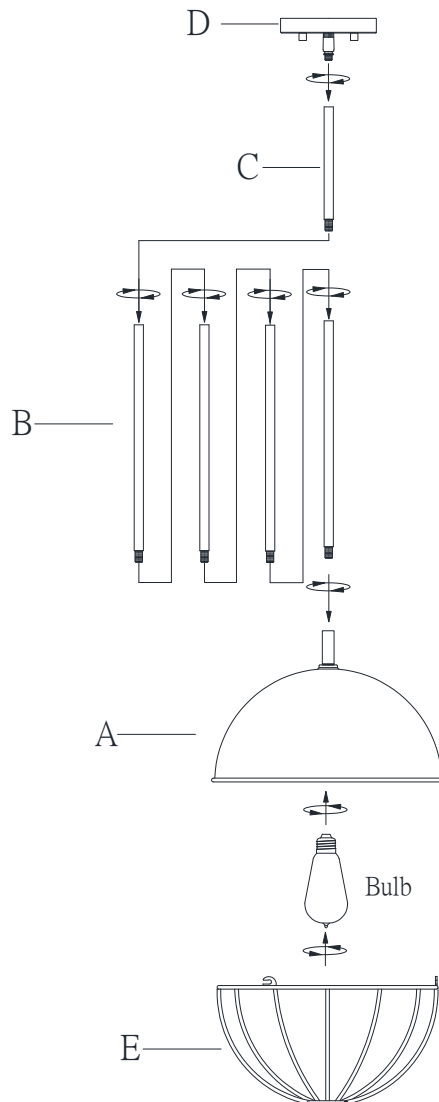

B → A → C → D → Bulb → E

1. Carefully unpack and identify all parts referring to illustration for parts identification.
2. Turn the power to the installation point **OFF**.
3. Unravel the supply power and ground wires and pass them through the center holes of center tube (B), (C) and canopy assembly (D).
4. Thread the bottom of center tube (B) into the coupling at the top of socket assembly (A). Repeat the process for remaining center tube (B), (C) as shown in the diagram, until snug.
5. Install canopy assembly (D) into the top of the center tube (C).
6. Referring to the installation instruction with the product for the wiring and installation.
7. Install proper bulbs (not provided) to each socket referring to the markings and / or labels on the fixture for maximum wattage.
8. Carefully place steel frame (E) to the socket assembly (A). Please sure tightening after aligning the sticking point.
9. Retain power to the installation point ON and retain this sheet for future reference.