
6-1024-3-SN

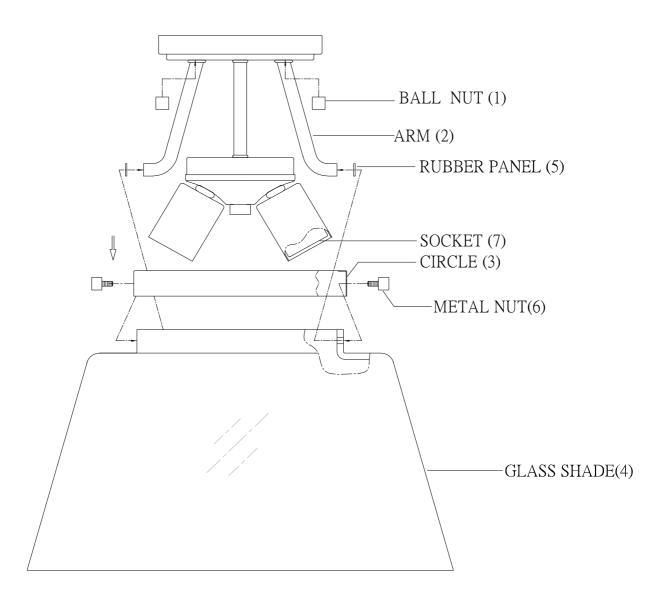





INSTALLATION **INSTRUCTIONS**

- 1. Carefully remove the fixture out of the carton, and check that all parts are included referring to the above illustration. Make sure not to misplace any parts that are needed for the installation;
- 2.Install the arm (2), bubber panel(5), and glass shade(4), circle(3), then screw them metal nut (6).
- 3. Fixture is ready for lamping and installation.