




SAVOY
HOUSE

ITEM NO: 7-1742-1

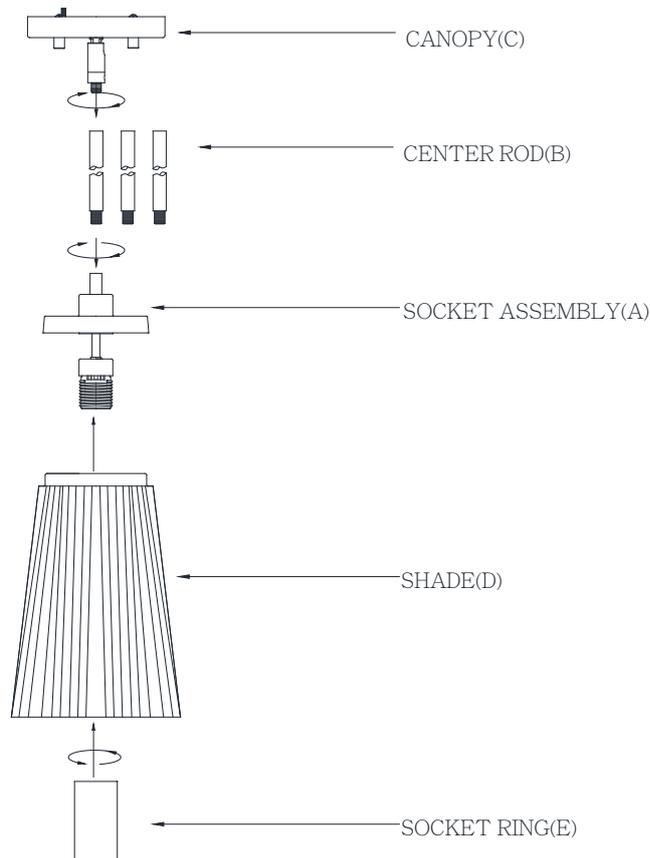

ASSEMBLY INSTRUCTIONS

1. Carefully unpack and identify all parts referring to illustration for parts identification.
2. Turn the power to the installation point OFF.
3. Unravel the supply power and ground wires and pass them through the center hole of center rod (B) and canopy assembly (C).
4. Thread the bottom of center rod (B) into the coupling at the top of socket assembly (A). Repeat the process for remaining center rods (B) as shown in the diagram and hand tighten until snug.
5. Install canopy assembly (C) into the top of the center rod (B).
6. Carefully place shade (D) onto the socket assembly (A), securing with socket ring (E).
7. Refer to the additional installation instructions included with the product for wiring and installation.
8. Install proper bulbs (not included) into each socket referring to the markings and/or labels on the fixture for maximum wattage.
9. Restore power to the installation point and retain this sheet for future reference.