


MERIDIAN

LITE TRENDS

ITEM NO: M70121NB

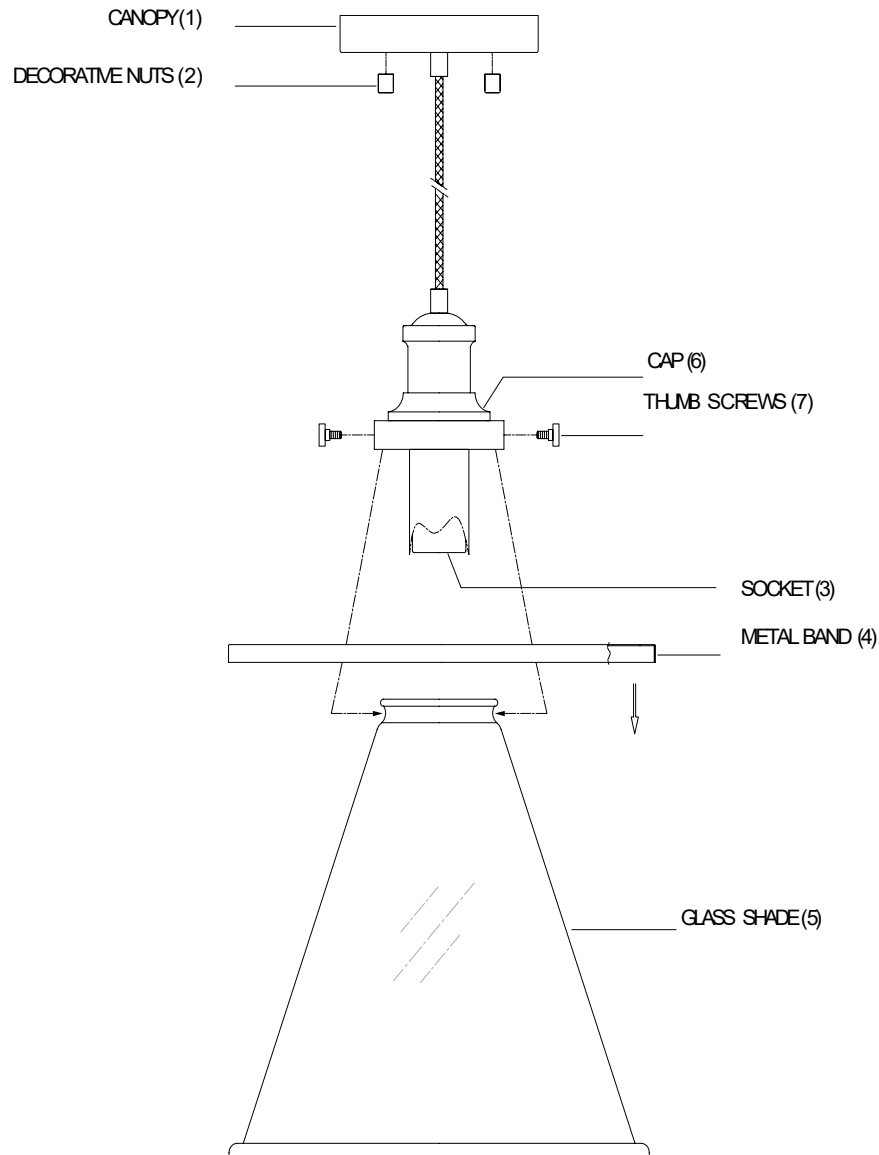

ASSEMBLY INSTRUCTIONS

1. Carefully unpack and identify all parts referring to illustration for parts identification.
2. Turn the power to the installation point OFF.
3. Install the metal band (4) onto the glass shade (5).
4. Install the glass shade (5) over the socket (3) and into the cap (6). Secure with thumb screws (7).
5. Install proper bulb (not provided) to each socket referring to the markings and / or labels on the fixture for maximum wattage.
6. Refer to the additional installation instructions included with the product for wiring and installation.
7. Restore power to the installation point and retain this sheet for future reference.