



WIRING METHOD A

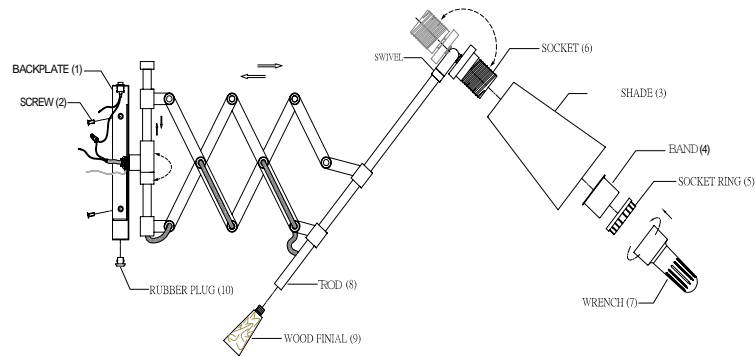

WIRING METHOD B

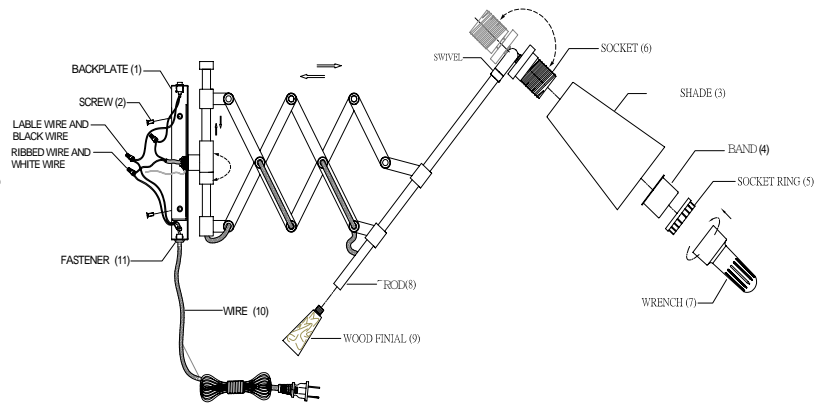

## ASSEMBLY INSTRUCTIONS

1. Carefully unpack and identify all parts referring to illustration for parts identification.
2. Turn the power to the installation point OFF.
3. Install the backplate(1) to the wall using the screw(2).
4. Refer to the additional installation instructions included with the product for wiring and installation.
5. Install proper bulbs (not included) into each socket referring to the markings and/or labels on the fixture for maximum wattage.
6. Install the shade (3), band (4), and socket ring (5) on the socket (6). Secure with the wrench (7).
7. Install the wood finial (9) into the rod (8).
8. Wiring Method A: Insert the rubber plug (10) into the hole of the backplate (1).
9. Wiring Method B: Connect the label wire and the black wire together. Connect the ribbed wire and the white wire together. Use the fastener (11) to fix the wire (10).
10. Restore power to the installation point and retain this sheet for future reference.
11. Note: To secure this sconce as a plug in, it should be installed into a stud.