


ITEM NO:M90062

M90068

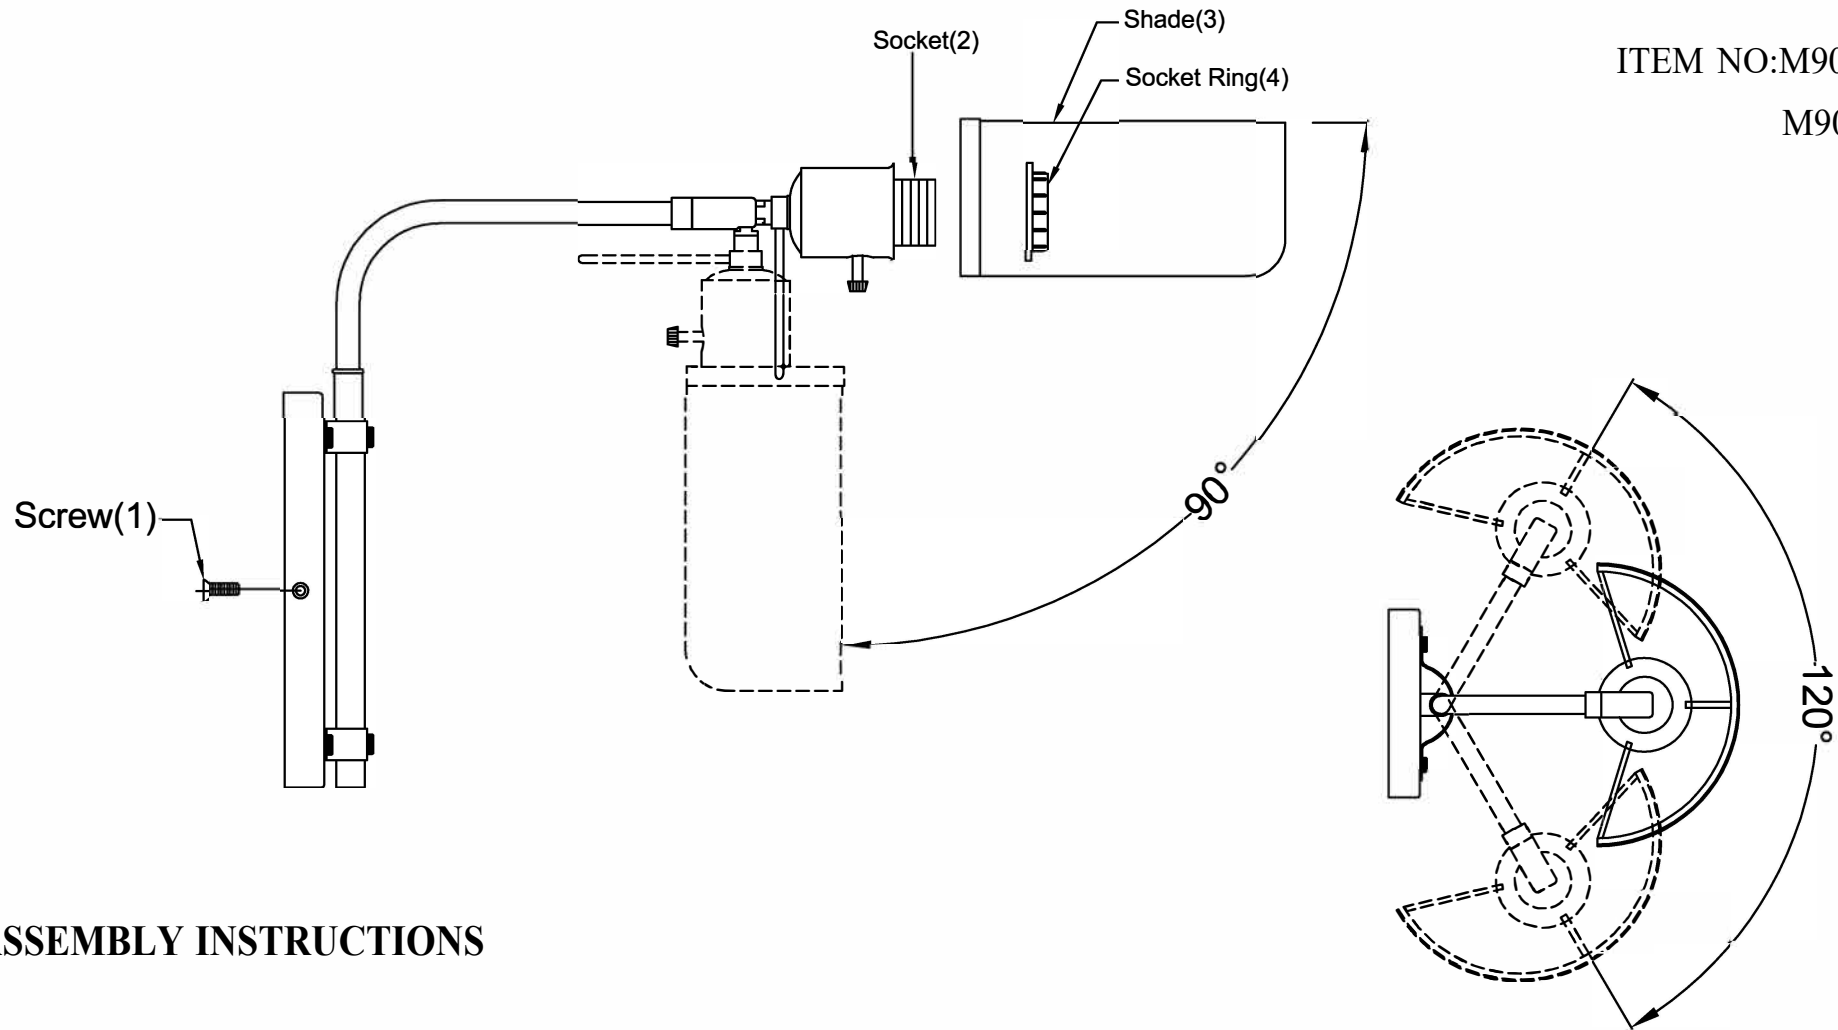

## ASSEMBLY INSTRUCTIONS

1. Carefully unpack and identify all parts referring to illustration for parts identification.
2. Turn the power to the installation point OFF.
3. Install the shade (3) onto the socket (2) and secure with the socket ring (4).
4. Install proper bulbs (not included) into each socket referring to the markings and/or labels on the fixture for maximum wattage.
5. Refer to the additional installation instructions included with the product for wiring and installation.
6. Restore power to the installation point and retain this sheet for future reference.