


MERIDIAN

LITE TRENDS

ITEM NO :M70020MBK
M70020ORB
M70020BN
M70020NB
M70020PN

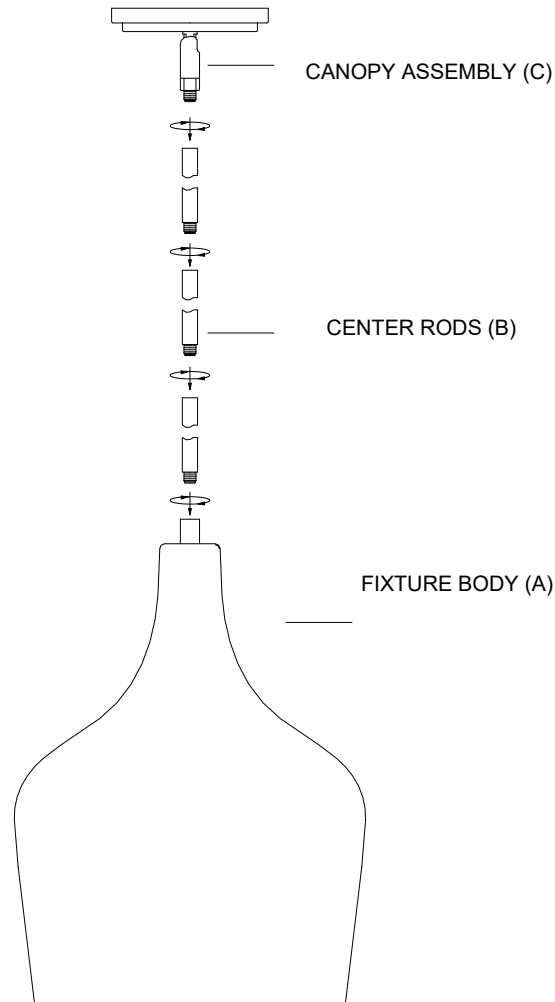

ASSEMBLY INSTRUCTIONS

1. Carefully unpack and identify all parts referring to illustration for parts identification.
2. Turn the power to the installation point **OFF**.
3. Unravel the supply power and ground wires and pass them through the center holes of center rods (B) and canopy assembly (C).
4. Thread the bottom of center rod (B) onto the protruding nipple at top of fixture body (A). Repeat the process for remaining center rods (B) as shown in the diagram, until snug.
5. Install the canopy assembly (C) onto the top of center rod (B).
6. Refer to the additional installation instructions included with the product for wiring and installation.
7. Install proper bulbs (not included) into each socket referring to the markings and/or labels on the fixture for maximum wattage.
8. Restore power to the installation point and retain this sheet for future reference.