


Convert carabiner system to swivel

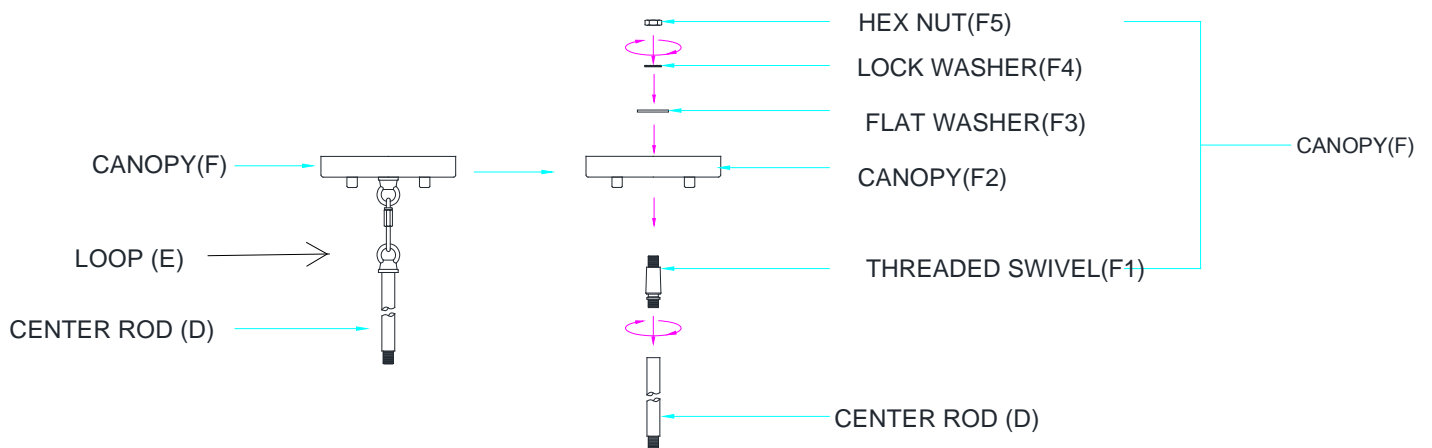

ASSEMBLY INSTRUCTIONS

1. Remove the loop, flat washer, lock washer, and hex nut from the canopy (F). Remove center rod (D).
2. Thread wire from center rod (D) through threaded swivel (F1) and canopy (F2).
3. Install the threaded swivel (F1) into the top of center rod (D).
4. Install the threaded swivel (F1) into the canopy (F2).
5. Place the flat washer (F3) and lock washer (F4) onto the top of the threaded swivel (F1) and secure with hex nut (F5).