
ITEM NO: M90097

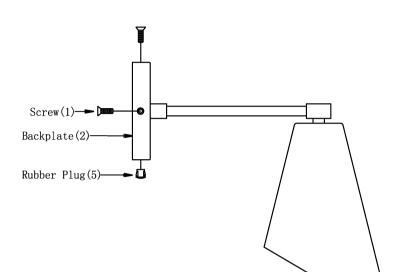


Shade (4)

WIRE METHOD A

ASSEMBLY INSTRUCTIONS

WIRE METHOD A

- Carefully unpack and identify all parts referring to illustration for parts identification.
- 2. Turn the power to the installation point OFF.
- 3.Install the backplate (2) to the wall using the screw (1).
- 4.Refer to the additional installation instructions included with the product for wiring and installation.
- 5.Install proper bulbs (not included) into each socket referring to the markings and/or labels on the fixture for maximum wattage. 6.Insert the rubber plug(5) into the hole of the backplate(2).
- 7.Restore power to the installation point and retain this sheet for future reference.

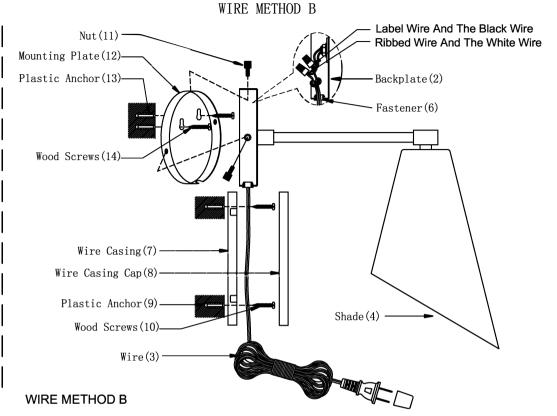

- 1. Carefully unpack and identify all parts referring to illustration for parts identification.
- 2. Turn the power to the installation point OFF.
- 3. Refer to the additional installation instructions included with the product for wiring and installation.
- 4.Install proper bulbs (not included) into each socket referring to the markings and/or labels on the fixture for maximum wattage.
- 5. Place the mounting plate (12) on the wall and mark where it will be installed using the key holes.
- 6. Drill the holes at the position where marked at the above step, and install the plastic anchors(13).
- 7.Install the mounting plate (12) on the wall using the wood screws (14) threaded into the plastic anchors (13).
- 8. Connect the label wire and the black wire together. Connect the ribbed wire and the white wire together. Use the fastener (6) to secure the wire (3).
- 9.Install the backplate (2) on the wall using the nut (11).
- 10.Install the wire casing (7) on the plastic anchors (9) and secure with the wood screws (10).
- 11.Install the wire casing cap (8) onto the wire casing (7).
- 12. Restore power to the installation point and retain this sheet for future reference.