
MERIDIAN LITE TRENDS

ITEM NO: M60063BN M60063MBK M60063NB M60063ORB M60063PN

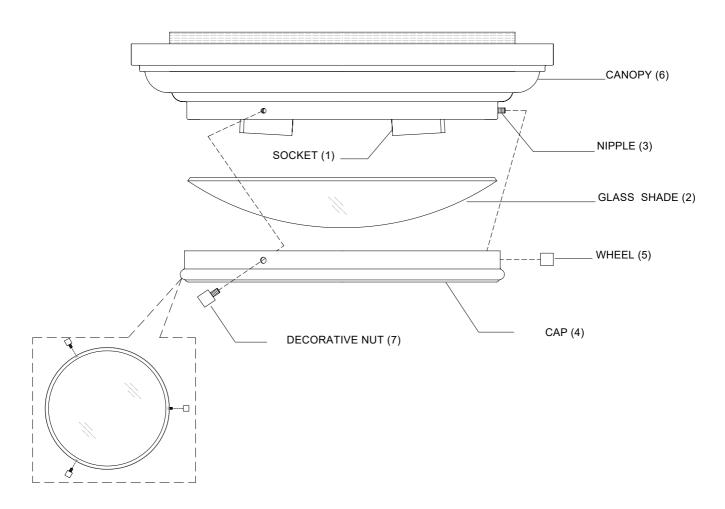

ASSEMBLY INSTRUCTIONS

- 1. Carefully unpack and identify all parts referring to illustration for parts identification.
- 2.Turn the power to the installation point OFF.
- 3.Install bulb (not provided) into socket (1).
- 4.Install the glass shade (2) onto the nipple (3). Install the cap (4) onto the canopy (6) with the wheel (5). Secure with the decorative nut (7).
- 5.Refer to the additional installation instructions included with the product for wiring and installation.
- 6.Restore power to the installation point and retain this sheet for future reference.