


MERIDIAN

L I T E T R E N D S

ITEM NO : M70101BN
M70101NB
M70101MBK

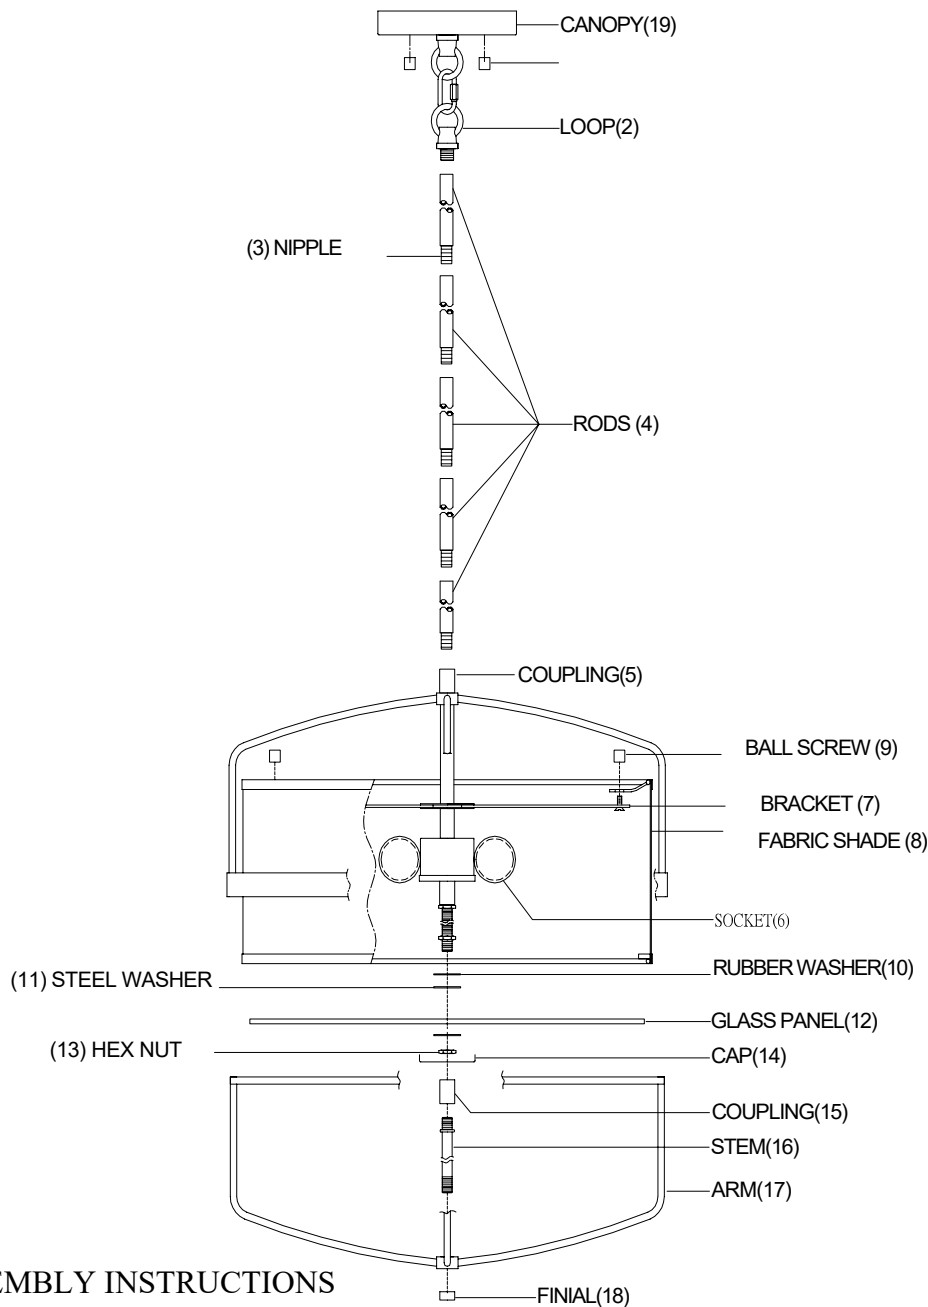

ASSEMBLY INSTRUCTIONS

1. Carefully unpack and identify all parts referring to illustration for parts identification.
2. Turn the power to the installation point OFF.
3. Assemble the rods (4) together using the nipple (3), then attach the bottom end of rods (4) into the coupling (5) tightly, then secure the loop (2) into the top of the rods (4).
4. Install the fabric shade (8) into the bracket (7) using the ball screw(9).
5. Install the bulb (NOT PROVIDED) into socket (6).
6. Assemble the rubber washer (10), the steel washer (11), the glass panel (12), the hex nut (13), and the cap (14) onto the coupling (15).
7. Assemble the stem(16) onto the arm(17), then secure with the finial (18).
8. Refer to the additional installation instructions included with the product for wiring and installation.
9. Restore power to the installation point and retain this sheet for future reference.