


M80035BN/CH/MBK/NB M80036BN/CH/MBK/NB

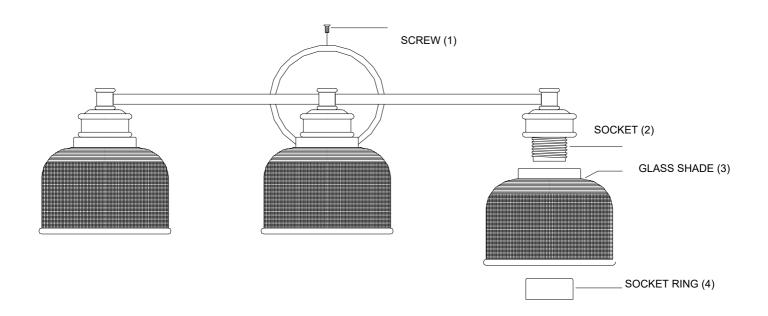

ASSEMBLY INSTRUCTIONS

- 1. Carefully unpack and identify all parts referring to illustration for parts identification.
- 2. Turn the power to the installation point OFF.
- 3.Install the glass shade (3) onto socket (2) and secure with socket ring (4).
- 4.Refer to the additional installation instructions included with the product for wiring and installation.
- 5.Install proper bulbs (not included) into each socket referring to the markings and/or labels on the fixture for maximum wattage.
- 6.Restore power to the installation point and retain this sheet for future reference.