


MERIDIAN

L I T E T R E N D S

ITEM NO:M80046MBK
M80046NB

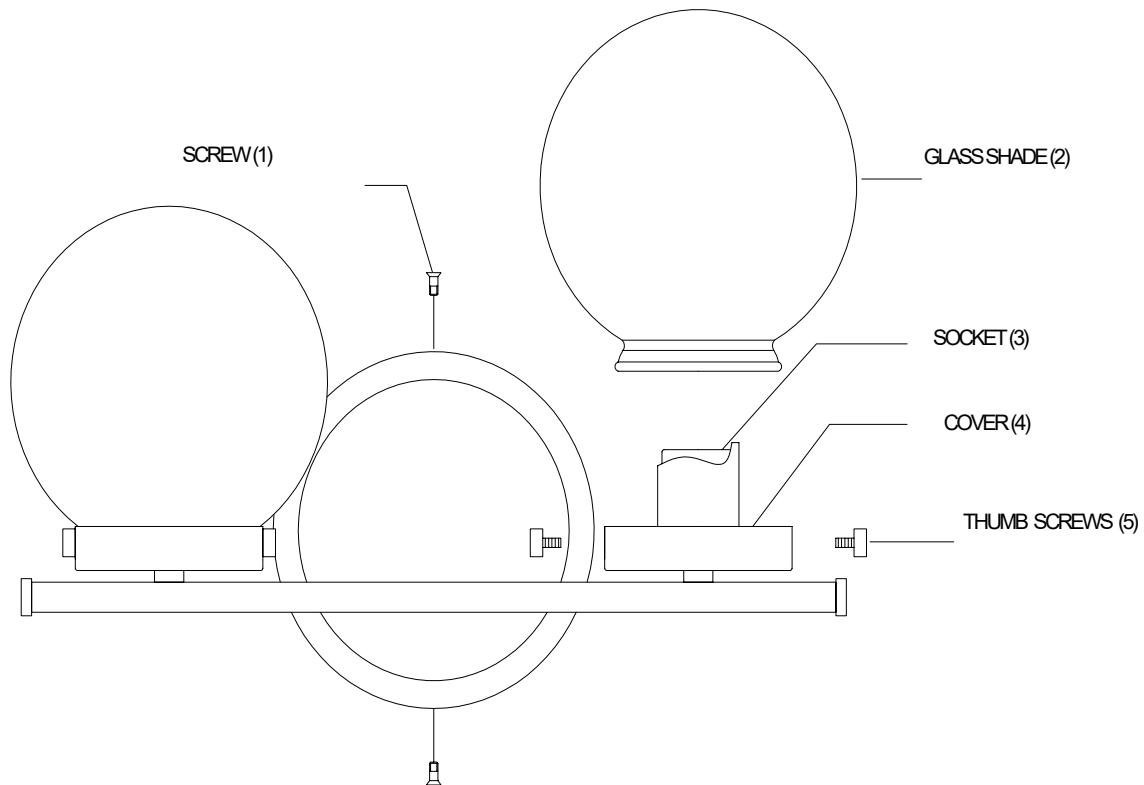

ASSEMBLY INSTRUCTIONS

1. Carefully unpack and identify all parts referring to illustration for parts identification.
2. Turn the power to the installation point OFF.
3. Install the bulb into socket (3).
4. Install the glass shade (2) onto cover (4) and secure with thumb screws (5).
5. Refer to the additional installation instructions included with the product for wiring and installation.
6. Restore power to the installation point and retain this sheet for future reference.