


MERIDIAN

L I T E T R E N D S

ITEM NO:M90019MBK
M90019NB
M90019ORB

SCREW (1)

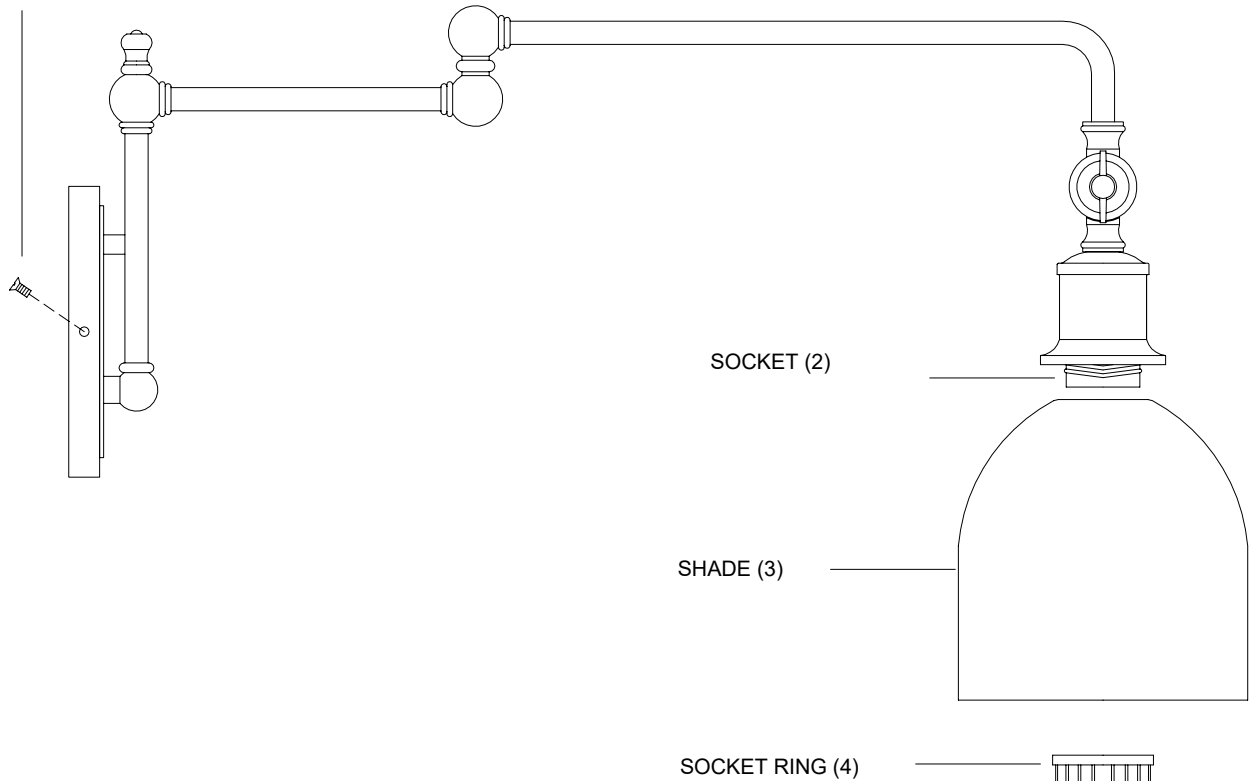

ASSEMBLY INSTRUCTIONS

- 1.Carefully unpack and identify all parts referring to illustration for parts identification.
- 2.Turn the power to the installation point OFF.
- 3.Install the shade (3) onto the socket (2). Secure with socket ring (4).
- 4.Refer to the additional installation instructions included with the product for wiring and installation.
- 5.Install proper bulbs (not included) into each socket referring to the markings and/or labels on the fixture for maximum wattage.
- 6.Restore power to the installation point and retain this sheet for future reference.