


SAVOY
HOUSE

ITEM NO.: 1-2185-9

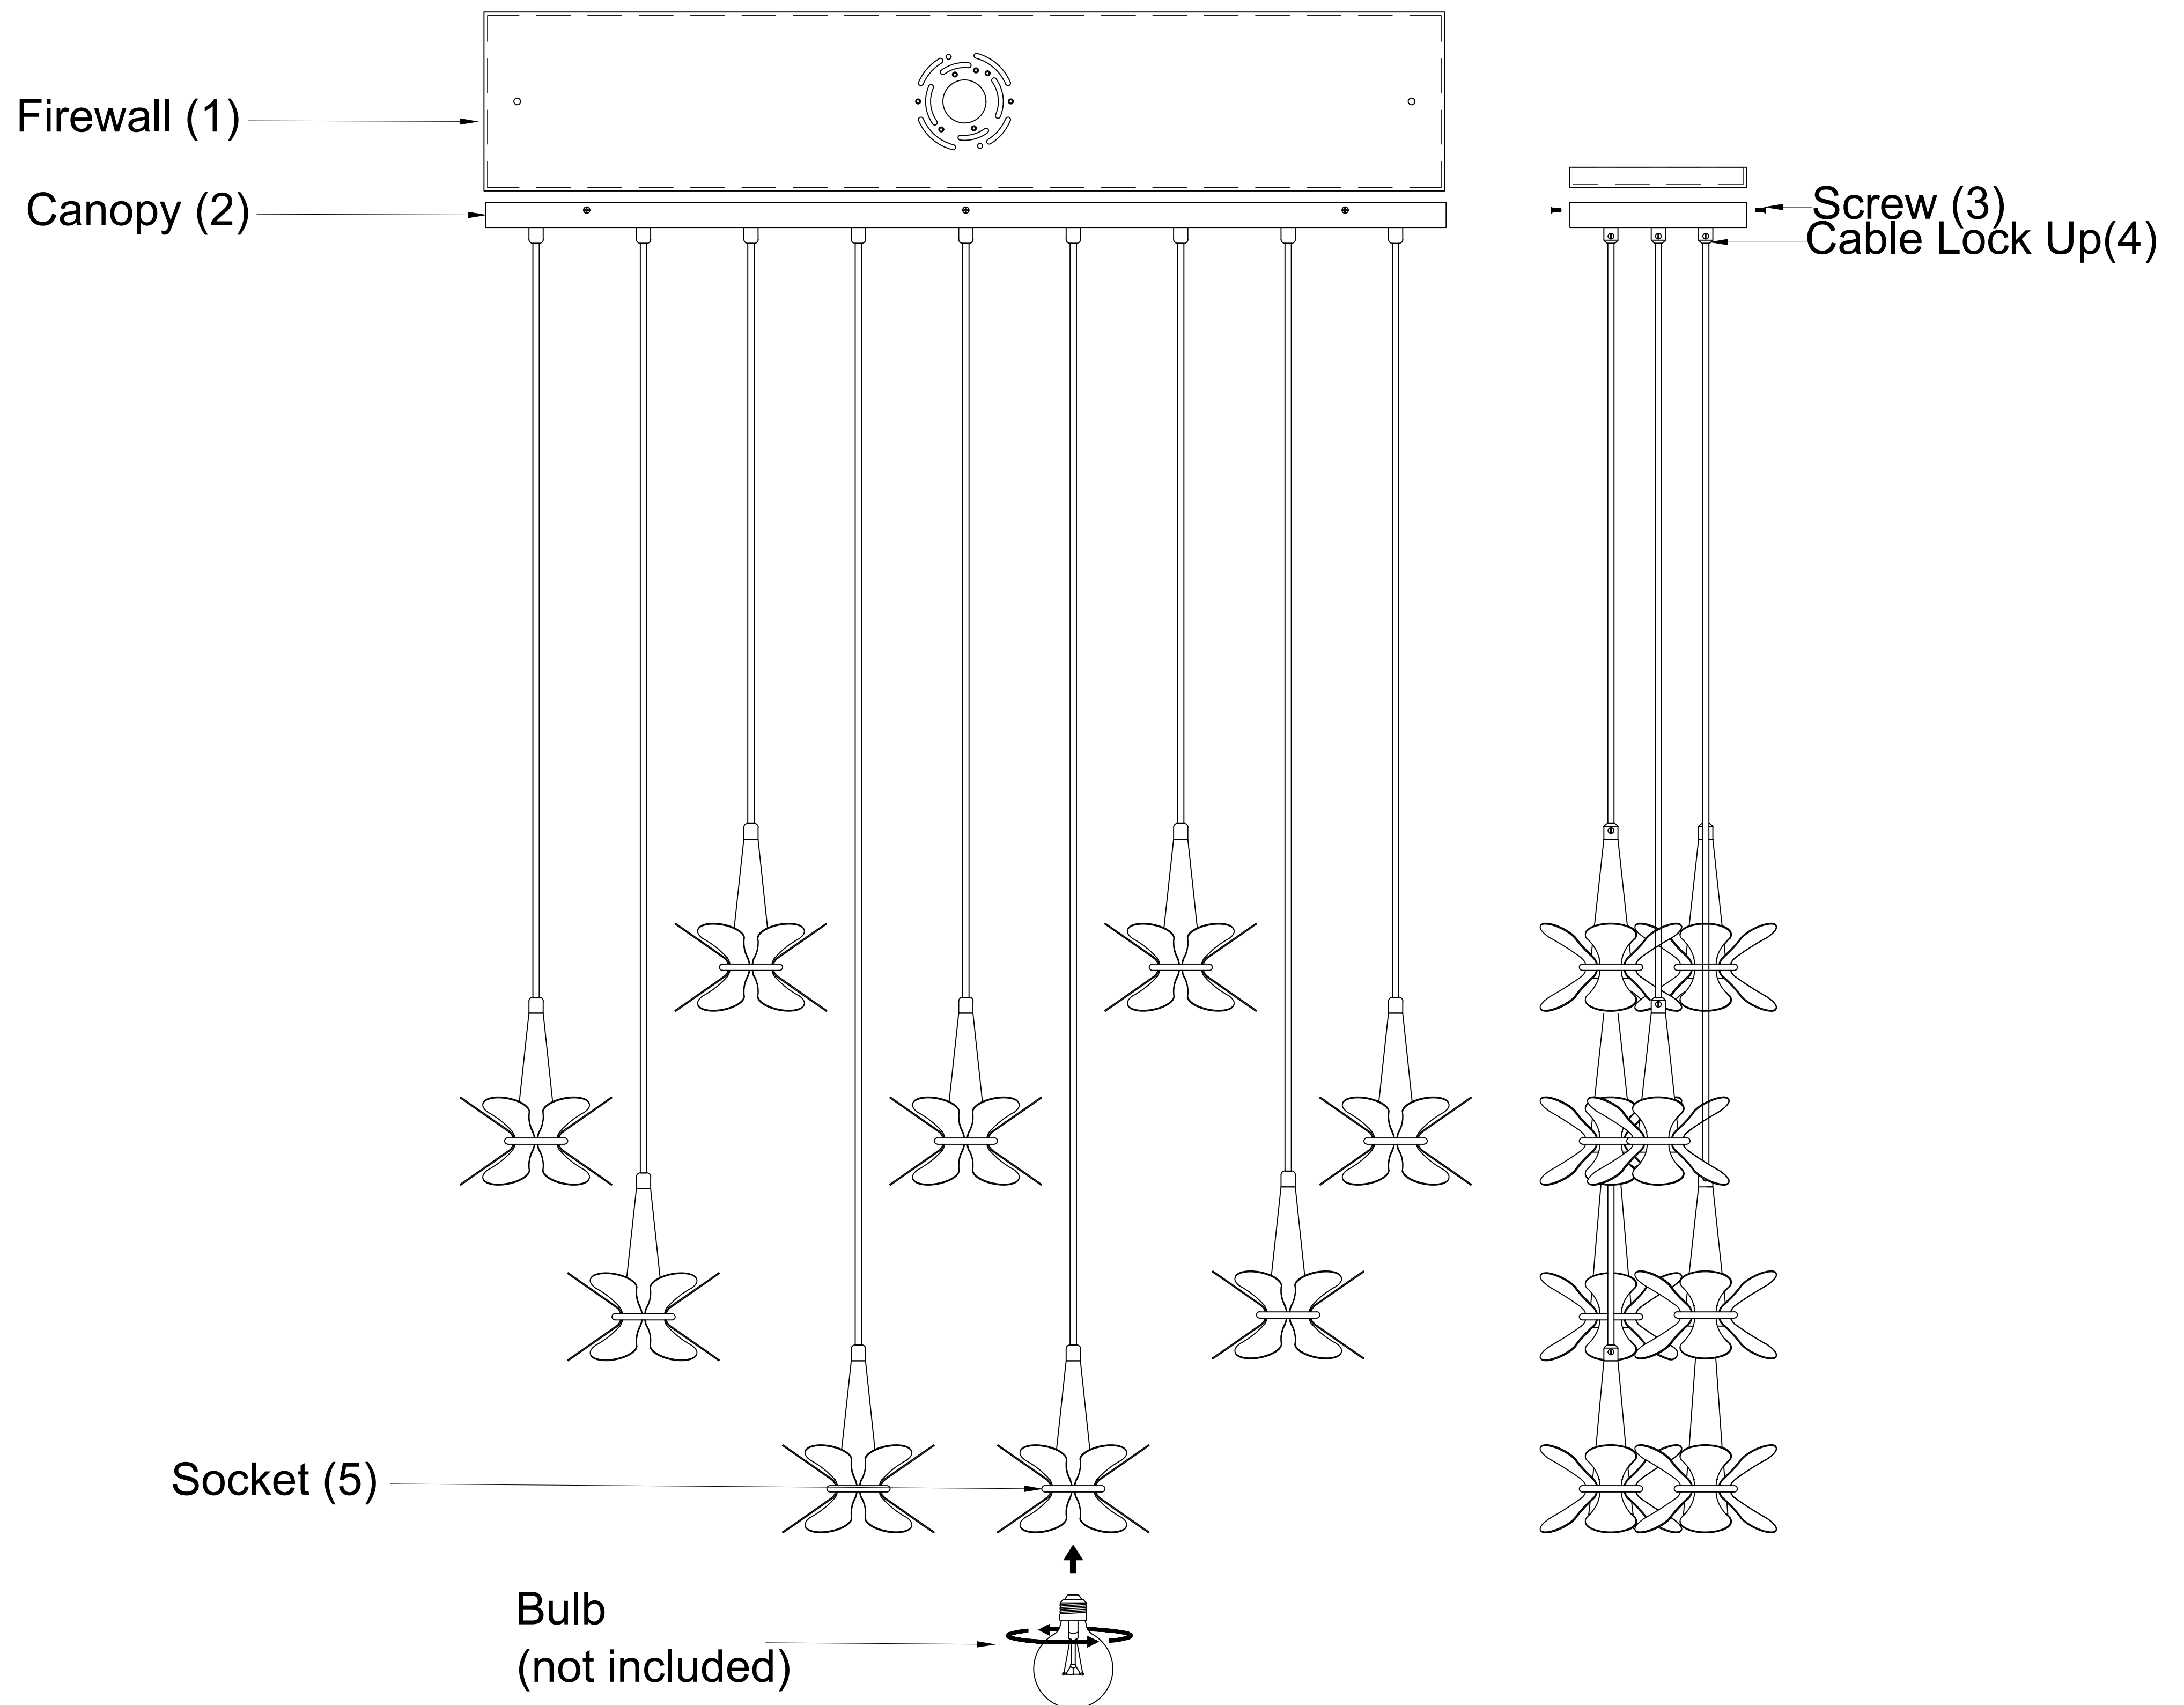

ASSEMBLY INSTRUCTIONS

1. Carefully unpack and identify all parts referring to illustration for parts identification.
2. Turn the power to the installation point OFF.
3. Remove the Firewall (1) from the Canopy (2) by removing the Screw (3).
4. Install the Firewall (1) to the ceiling.
5. Loosen the Cable Lock Up (4). Adjust the wire to desired height and lock with the Cable Lock Up (4).
6. Refer to the additional installation instructions included with the product for wiring and installation.
7. Place Canopy (2) over the Firewall (1), making sure to not cut any wires. Align holes on the side of Canopy (2) with threaded holes on the side of Firewall (1) and thread back in Screw (3).
8. Install proper bulbs (not included) into each Socket (5) referring to the markings and/or labels on the fixture for maximum wattage.
9. Restore power to the installation point and retain this sheet for future reference.